



370037

ENGLISH

Table of contents

1. Safety 16
1.1 Safety instructions 16
1.2 Key to symbols 19
1.3 Proper use 20

2. General information 21
2.1 Liability and Warrantees 21
2.2 Copyright protection 21
2.3 Declaration of conformity 21

3. Transport, packaging and storage 22
3.1 Delivery check 22
3.2 Packaging 22
3.3 Storage 22

4. Technical data 23
4.1 Overview of parts 23
4.2 Technical specification 24

5. Installation and operation 25
5.1 Installation 25
5.2 Operation 26

6. Cleaning 27

7. Waste disposal 28

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.

- This device may only be operated in technically proper and safe condition.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not lay the power cable over carpets or other inflammable materials. Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids; do not put it under running water and clean any parts of the appliance in the in the dishwasher.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

Follow the safety instructions listed in order to avoid the hazard:

- During the operation, the housing of the device and grill grid / heater becomes very hot. Do not touch it with bare hands. Use appropriate kitchen utensils to place and remove food products from it.
- Also after switching off, the device remains hot for some time. Before cleaning or moving it to another place wait until the device cools down first.



WARNING! Fire or explosion hazard!

Follow the safety instructions listed in order to avoid the hazard:

- In order to avoid risk of fire and damage to the device, **never** place kitchen utensils, towels, paper and the like on the grill plate during operation.
- **Never** operate the device near combustible, easily flammable materials (e.g. petrol, spirit, alcohol etc.). They evaporate through heating and in case of contact with ignition sources deflagrations can occur which can lead to serious personal injuries and property damages.
- When a fire arises unplug the power cord from the socket before you initiate appropriate measures for fire-fighting. Provide sufficient supply of fresh air.

Caution: Never extinguish the fire with water when the power plug is connected to the socket. **Electric shock hazard!**

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Proper use



CAUTION!

The device has been designed and built for commercial use and should be operated only by qualified personnel in kitchen facilities.

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The water grill is designed only for grilling meat, fish and vegetables.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.


4. Technical data

4.1 Overview of parts

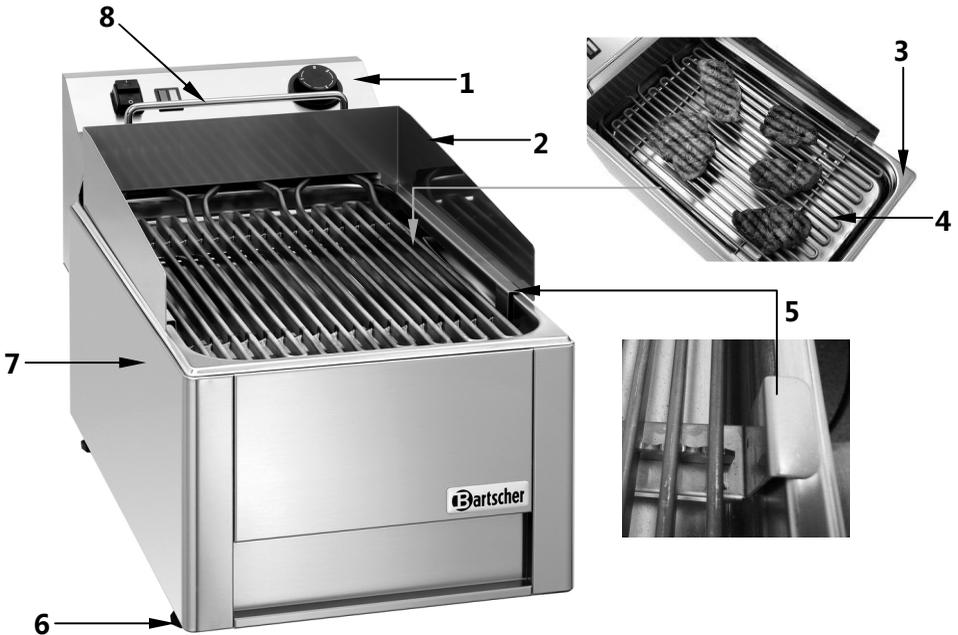

- 1** Control box with control elements
- 2** Splash guard
- 3** Dip tray
- 4** Grill grid / heater
- 5** Grid support
- 6** Height adjustable feet (4)
- 7** Housing
- 8** Control box handle

Control elements

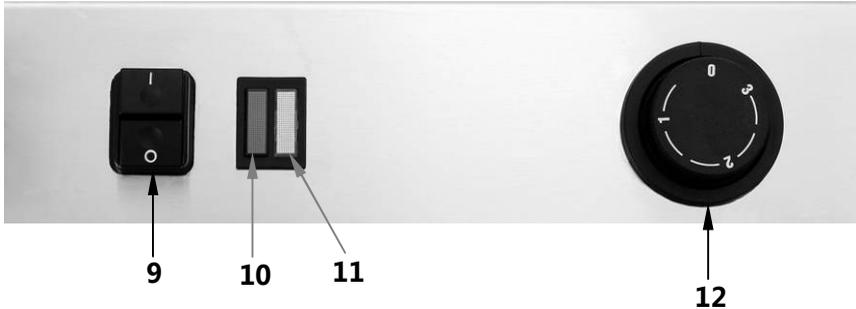

- 9** ON/OFF switch
- 10** Power indicator (green)
- 11** Heating indicator (orange)
- 12** Temperature regulator

4.2 Technical specification

Name	Water grill 40
Code-No.:	370037
Material:	Chrome nickel steel
Design:	With dip tray 1/1 GN, for easy cleaning
Power:	4,08 kW / 400 V 50 Hz 3 NAC
Temperature control:	3-level temperature setting by knob operation
Heating time:	ca. 2.5 minutes at the highest temperature level
Size:	W 330 x D 630 x H 330 mm
Grill surface:	W 280 x D 445 mm
Weight:	13.5 kg
Accessories:	Cleaning scrapper

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation



CAUTION!

Any installation, connection and maintenance work related to the device may be performed by the qualified and authorised technician only, according to the valid international, national and local regulations.

Positioning

- Unpack the device and remove all packing material.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on the flammable surfaces.
- **Never** place the device in humid or wet environment.
- The surface on which the device is placed must be easily accessible and sufficiently large. To enable easy operation of the device and ensure proper air circulation, leave the space of at least 10 cm at the back and on the sides of the device and at least 50 cm from the top and in front of it.

Connection



DANGER! Electric shock hazard!

**The device can cause injuries due to improper installation!
Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

- The device is equipped with the connection cable of **H07RN-F 5x2.5mm²** type.
- Place the power cord in such a way as to prevent its exposure to temperature exceeding 50 °C.
- The electrical circuit in the socket must be secured to at least 16A.
- We recommend a CEE16A/400 V socket.

5.2 Operation

Preparation of the device

- Before the first use, clean the device thoroughly. For this purpose, using the handle detach the control box with the grill grid / heater, and then remove the support and splash guard as well as the dip tray. Observe the instructions included in **section 6 „Cleaning“**.
- After cleaning, place the dip tray on the housing of the device. Fill in the tray in half at the maximum.
- Mount the splash guard on the edge of the dip tray.
- Mount the support of the grill grid / heater. Using the handle, mount the control box and check whether the support is located directly below the spacer element of the grill grid. Now the device is ready to operation and grilling.

Switching the device on

- Connect the device to the grounded socket.
- To switch the device on, set the **ON/OFF** switch in „I“ position. The green power indicator will come on.
- By turning the temperature regulator knob, set the desire **heating level** within the range from **1 to 3**. The orange heating indicator comes on and remains on during the heating of the device. The heating indicator goes off after the set temperature has been reached and comes on again when the heater should initiate the heating process again.
- The device is heating up very fast. After the device is heated, you can place grilling products on the grill.

Preparation of food

- Prepare food products for grilling. Place them in turn on the grilling surface / heater.
- Fat and food remains fall into the dip tray located under the grill grid / heater.



HOT SURFACE! Risk of burn!

The grilling surface gets hot quickly and remains hot for some time after switched the device off. To avoid burns, do not touch the grilling surface with bare hands during the operation and directly afterwards

Use appropriate grill utensils to place and remove grilled food from the grill!

- You may use any preferred grill utensils for placing and removing grilled food (forks, tongs, etc.), **but plastic kitchen utensils** must not be used.



WARNING!

Never place plastic or other containers on the grill grid / heater, as the high temperature may damage the grill grid / heater.

- Control the water level in the dip tray while grilling. Never add water during the grilling process, water may not be spilled on the hot grill grid / heater. Switch the device off using the **ON/OFF** switch and leave the device to cool off. Before pouring water into the dip tray, remove the control box from the device using its handle.
- When you finish using the grill, set the temperature regulator knob to „0“ position, switch the **ON/OFF** switch to „0“ position and disconnect the device from the power supply.

6. Cleaning



WARNING!

Before cleaning, switch the device off using ON/OFF button, disconnect it from the power supply.

Wait until the device has cooled off.

The device is not designed to be rinsed with running water.

Do not use a pressure washer to clean the device!

Be careful and do not let the water into the device.

Cleaning of the device

- Before cleaning, leave the device to cool off.
- Remove the grilling remains from the grill grid / heater with the supplied scraper or sponge.
- Remove **the dip tray**, empty and clean it with a soft cloth or sponge with a mild cleaning agent. Rinse the dip tray with clean water and then dry it thoroughly before mounting it again in the device.

- Clean **the housing** and **control elements** of the device regularly with a soft cloth, soaked with warm water and a mild cleaning agent.
- All the cleaned surfaces **should be dried thoroughly**.
- Use only soft cloths, **never** use any abrasive cleaning agents which could scratch the device surface.

Storage of the device

- If the device is not used for a long time, clean it thoroughly as described and store it in a place which is clean, dry, frost-free, protected from the sun and inaccessible for children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120