

1KA10-FM



A120467

ENGLISH

Table of contents

1. Safety 18
1.1 Key to symbols 18
1.2 Safety instructions 19
1.3 Use as intended 22
1.4 Use against the intended purpose 22

2. General information 23
2.1 Liability and Warrantees 23
2.2 Copyright protection 23
2.3 Declaration of conformity 23

3. Transport, packaging and storage 24
3.1 Delivery check 24
3.2 Packaging 24
3.3 Storage 24

4. Technical data 25
4.1 Overview of parts 25
4.2 Technical specification 26

5. Installation and operation 27
5.1 Installation 27
5.2 Operation 28

6. Cleaning and descaling 29

7. Possible Malfunctions 31

8. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



HOT STEAM!

This symbol indicates that during the operation the hot steam escapes from the device. Risk of scalding if safety instructions are not observed!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- **Never** leave the device unattended when in use.
- Only use the device indoors.

- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

To avoid the effects of this risk, follow the safety instructions presented below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water or other liquids.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard will occur**.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



HOT SURFACE! Burn hazard!

To avoid the effects of this risk, follow the safety instructions presented below.

- In operation, the body and lid of the device are hot. Do not touch with bare hands. Use the lid handle to lift up the lid.
- The device stays hot for some time after switched off. Before pouring out the water, starting cleaning or moving the device, let it cool down sufficiently.



HOT STEAM! Risk of scalding!

To avoid the effects of this risk, follow the safety instructions presented below.

- The evaporating steam is hot. Take extra care when opening the lid. The hot steam may cause burns to your hands and face. Use protective gloves or saucepan cloth.
- Use sausage tongs or long fork to handle the hot sausage.

1.3 Use as intended

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

The sausage warmer is designed for heating sausages and maintaining their temperature.

1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**“ is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

4. Technical data

4.1 Overview of parts

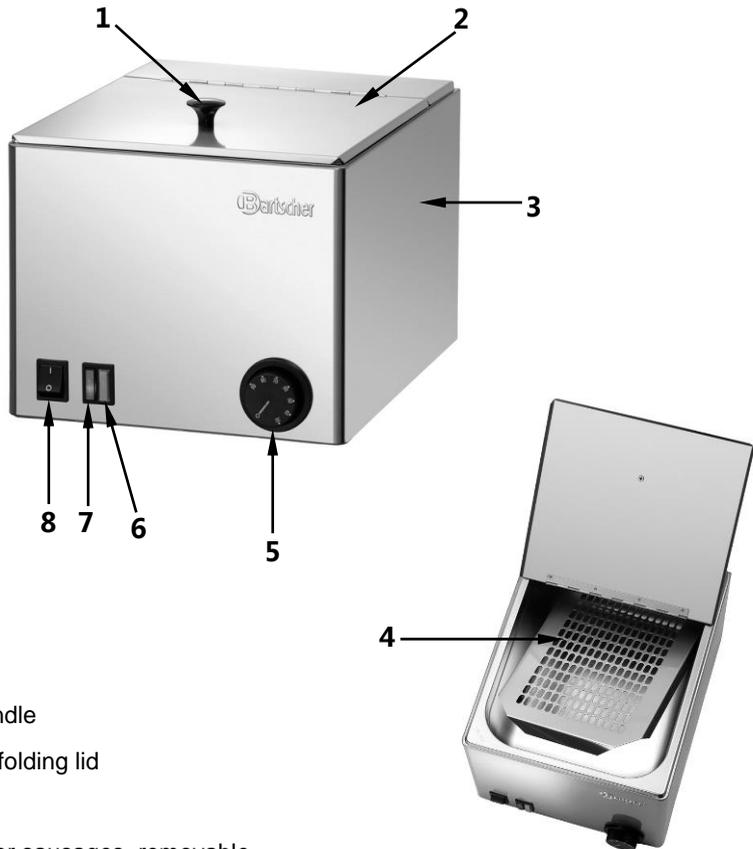

- 1 Lid handle
- 2 Fixed, folding lid
- 3 Body
- 4 Rack for sausages, removable
- 5 Temperature control
- 6 Heating control (orange)
- 7 Power control (green)
- 8 **ON/OFF** switch

4.2 Technical specification

Description	Sausage warmer 1KA10-FM
Code-No.:	A120467
Material:	Stainless steel
Model:	<ul style="list-style-type: none">▪ 1 basin, W 240 x D 300 x H 150 mm▪ Without drainage tap▪ Temperature control: thermostatic▪ Thermostat▪ Electronic control▪ ON/OFF switch▪ Indicator lights:<ul style="list-style-type: none">- ON/OFF- Heating▪ Features:<ul style="list-style-type: none">- Fixed lid, folding- Rack for sausages, removable
Power:	1 kW / 230 V 50/60 Hz
Temperature control:	30 °C to 90 °C
Dimensions:	W 270 x D 360 x H 240 mm
Weight:	6.0 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device, remove and dispose of all package material according to the environment protection regulations.



CAUTION!

Never remove the nameplate and warning signs from the device.

- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device on the flammable surfaces.
- Do not place the device near open flame, electric heaters or other heat source.
- **Never** place the device in humid or wet environment.
- When locating the device make sure there is a 10 cm gap from any walls or other objects.
- When locating the device, make sure the power plug is easily available to immediately unplug the device when necessary.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

5.2 Operation

- Before use, clean the device according to the instructions set out in point 6 “**Cleaning and descaling**”.
- Open the lid and place the rack for sausages at the bottom of the basin.
- Place the desired number of sausages on the rack.
- Pour in the desired amount of water. Take into account the “**MIN**” and “**MAX**” marks in the basin.



WARNING! Risk of burns!

When filling up the basin do not exceed the “MAX” mark. Splashes of hot water may cause scalding!



NOTE!

Fill up the device’s tank with warm water to save time and energy!

- Close the lid.
- Connect the device to a single grounded socket.
- Switch on the device with **ON/OFF** switch, setting it at “**I**” position. The green power control light will come on.
- Set the desired temperature within the range from 30 °C to 90 °C with the temperature control knob. The orange heating control light will be on.
- When the desired temperature has been reached, the orange heating control light should go off. When the temperature in the basin drops, the orange heating control light comes on again and the device should continue warming up to reach the set temperature.
- This way, the sausages may be kept warm during the desired time.



CAUTION!

Make sure the water level does not drop below “MIN”! Check the water level regularly during operation and add water when necessary. Never use the device without water!

- Take the sausages out of the basin before serving.



HOT STEAM! Risk of burns!

The steam may appear when lifting the lid and handling the sausages. It may cause scalding of your hands, arms and face. Use a kitchen cloth or protective gloves to open the device! Use sausage tongs or long fork to take the sausages out.

- Before any scheduled break in operation, switch off the device with **ON/OFF** switch (setting it to “O” and disconnect the device (pull the plug!).
 - ❖ The device is equipped with **thermostat protection unit** that will be activated in case of thermostat failure. The device shall switch off automatically.
Note: when the thermostat protection unit is triggered, unplug the device and let it cool down. Notify the maintenance service or contact the supplier.

6. Cleaning and descaling



WARNING!

Before starting cleaning, switch the device off with the **ON/OFF** switch (set to “O” position) and disconnect it from the power supply (unplug!).

Leave the device to cool down completely.

The device is not suited for direct washing via water jets!

Protect the device from water penetration.

Cleaning

- Clean the device regularly.
- Clean it with a soft cloth only and **never** use any abrasive cleaning agents that could cause damage to the surface of the device or its accessories.



WARNING! Risk of burns!

Let the water cool down before removing it. Splashes of hot water may cause scalding!

- Remove the rack for sausages from the basin. Clean it with a wash brush in a warm water with mild cleaning agent and finally, rinse the rack under the running water.
- Drain the water from the device to an appropriate container or sink.
- Due to hygiene reasons, clean the basin with the fixed lid at least **twice a day**. Clean the basin and the lid with warm water and mild cleaning agent. Use a soft cloth or sponge. Rinse the basin and the lid with clean water and wipe all cleaned elements dry with a soft cloth.

Descaling

- Adverse water properties and salts, fat and spices from the sausages may contribute to aggressive water content that may cause scaling at the bottom of the container, or even chemical reactions with metal. **Regularly descale** the container. Use popular, commonly available descaling products or water-vinegar solution.



CAUTION!

Lack of regular descaling of the device as set forth in the instruction manual may constitute a ground for rejecting warranty claims. Such claims are not covered by the warranty!

Storage

- When the device is not to be in use for longer time, clean it according to the above description and store in a clean and dry place, frost and sun proof and away from reach of children.

7. Possible Malfunctions

In case of malfunction, disconnect the device from its power source. Before contacting the service or sales agent, verify - based on the table below - whether it is possible to eliminate disruption in operation.

Problem	Cause	Solution
The temperature is set but the control lights are not on.	<ul style="list-style-type: none">• Power plug not in.• Control light(s) broken.	<ul style="list-style-type: none">• Plug in.• Contact the supplier.
The device is ON and temperature adjustment knob is set but the device does not warm up.	<ul style="list-style-type: none">• Heating element broken.	<ul style="list-style-type: none">• Contact the supplier.
The device switches off by itself when operating.	<ul style="list-style-type: none">• Thermostat broken.	<ul style="list-style-type: none">• Contact the supplier.

If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - code number and serial number (see identification plate on device underside);
 - date of purchase.

8. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.