

420/20L



300746

ENGLISH

Table of contents

- 1. Safety.....30**
 - 1.1 Key to symbols.....30
 - 1.2 Safety instructions.....31
 - 1.3 Use as intended.....34
 - 1.4 Use against the intended purpose34
- 2. General information35**
 - 2.1 Liability and Warrantees35
 - 2.2 Copyright protection.....35
 - 2.3 Declaration of conformity35
- 3. Transport, packaging and storage36**
 - 3.1 Delivery check.....36
 - 3.2 Packaging.....36
 - 3.3 Storage36
- 4. Technical data.....37**
 - 4.1 Technical specification.....37
 - 4.2 Overview of parts38
 - 4.3 Accessories.....39
- 5. Installation and operation40**
 - 5.1 Installation and connection.....40
 - 5.2 The benefits of vacuum packing41
 - 5.3 Guidelines for vacuum packaging42
 - 5.4 Operation45
 - 5.4.1 Functions of control buttons / indicators45
 - 5.4.2 Vacuum packaging.....48
- 6. Cleaning53**
- 7. Possible Malfunctions.....54**
- 8. Waste disposal56**

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



DANGER!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



WARNING of hand injury!

This symbol highlights dangerous situations which could lead to serious hand injury.



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



DANGER! Electric shock hazard!

In order to avoid this risk, please observe the following safety instructions.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water.

- Check the power cord regularly for damage. Do not use the device if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



WARNING of hand injury!

In order to avoid this risk, please observe the following safety instructions.

- To avoid burns of fingers or hand, never touch the sealing strip, sealing bar and vacuum chamber shortly after the end of work.



WARNING! Burn hazard!

In order to avoid this risk, please observe the following safety instructions.

- During the operation and shortly after, the sealing strip and sealing bar are hot. Do not touch these parts of the device.
- Operate the device only using the designated handles and control elements.
- The device should be cold before cleaning.

1.3 Use as intended

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

The vacuum packaging machine is only intended for vacuum packaging and marinating of appropriate food products or other objects.

1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**“ is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.


4. Technical data

4.1 Technical specification

Name	Vacuum packaging machine 420/20L
Code- No.:	300746
Material:	Stainless steel, plastic
Colour:	Silver, black
Model:	<ul style="list-style-type: none">▪ Functions:<ul style="list-style-type: none">- combined vacuuming and sealing- manual sealing- marinating▪ Vacuum control: electronic▪ Length of sealing strip: 420 mm▪ Number of seal seams: 2▪ Regulated sealing duration: 2 levels▪ Control: electronic▪ Interior lighting▪ Digital display▪ ON/OFF switch▪ Control light: On/Off▪ Features:<ul style="list-style-type: none">- Roll holder with integrated blade
Power:	0.35 kW / 220-240 V 50 Hz
Vacuum pump:	20 L/min.(1.2 m ³ /h)
Maximum vacuum:	-900 mbar
Dimensions:	W 500 x D 395 x H 140 mm
Weight:	6.5 kg
Includes:	1 vacuuming film roll (width 40 cm, length 6 m) 1 connecting hose (for external vacuuming)

We reserve the right to make technical changes!

4.2 Overview of parts

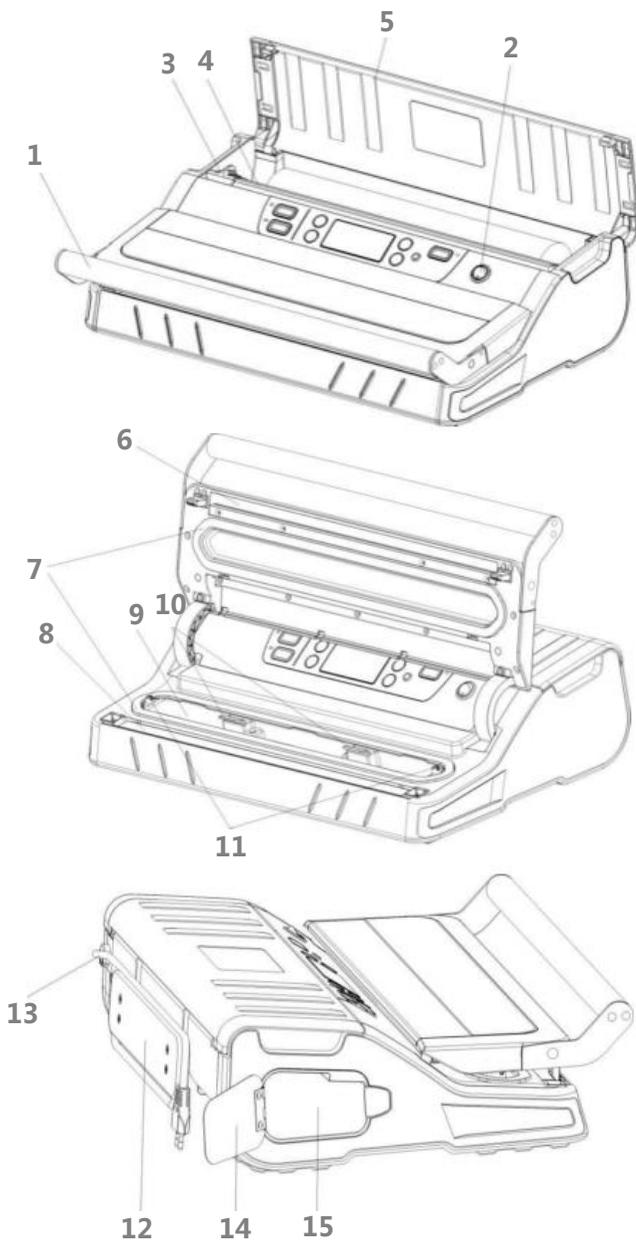

Description of figure on page 38

- | | |
|----------------------------------|---|
| 1 Front cover with handle | 9 Vacuum chamber |
| 2 ON/OFF switch | 10 Vacuum bag clamps |
| 3 Blade | 11 Air-suction holes |
| 4 Cutting rail | 12 Element for winding the power cable |
| 5 Rear cover | 13 Power cable |
| 6 Sealing bar | 14 Hose holder flap |
| 7 Upper + lower gasket | 15 Connecting hose holder |
| 8 Sealing strip | |

4.3 Accessories

(not included in the delivery!)



Vacuum sealer roll set 220

Set consists of 2 foil rolls,
each 22 cm wide, 5 m long

Code-no. 300418

Vacuum sealer roll set 280

Set consists of 2 foil rolls,
each 28 cm wide, 5 m long

Code-no. 300419

Vacuum sealer roll set 400

Set consists of 2 foil rolls,
each 40 cm wide, 6 m long

Code-no. 300424



Vacuum bags G1,2L

Capacity: 1.2 litres

Dimensions: 160 x 250 mm

Code-no. 300411

Vacuum bags G2,5L

Capacity: 2.5 litres

Dimensions: 200 x 300 mm

Code-no. 300412

Vacuum bags G7,5L

Capacity: 7.5 litres

Dimensions: 300 x 400 mm

Code-no. 300413

5. Installation and operation

5.1 Installation and connection

Positioning

- Unpack the device and remove all package materials according to the valid environment protection regulations.



CAUTION!

Never remove the nameplate and warning signs from the device.

- Place the device on a flat, dry, safe surface capable of supporting the device's weight.
- **Never** place the device on an inflammable surface.
- Do not place the device near an open flame, electric heater or other heat source.
- **Never** place the device near flammable materials, such as alcohol, spirits, or petrol.
- **Never** place the device at the edge or side of the working surface.
- Never cover or block ventilation holes of the device.
- It is necessary to pay attention to ensure good air circulation around the vacuum packing machine. There should be 10 cm of free space at the sides of the device, and 1 m above it.
- The device must be placed in an area inaccessible to children. It is necessary to ensure that small children cannot access the device by pulling the power cable.
- Place the device so that the plug is easily accessible so as to quickly disconnect the device if the need arises.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

5.2 The benefits of vacuum packing

During vacuum packing, after air is removed, plastic bags and containers are sealed shut which stops or slows the process of foodstuffs spoilage. Owing to vacuum packing foodstuffs can be stored from three to five times longer than normally. The taste and vitamins are retained in the foodstuffs.

In this manner foodstuffs are protected from drying out and oxidation, as well as from bacteria and mould.

Vacuum packing is a preservation process which is recommended for fresh foodstuffs and must be accompanied by low temperatures; vacuum-packed products must be kept in the refrigerator, freezer, or cooler, in order to achieve the best results.

In this manner the preserved foodstuffs can be kept for a longer time than in other, non-vacuum-packed containers which reduce the time in which foodstuffs may be consumed to a few hours or days.

Vacuum packing is used in order to improve the organization of work, conserve foodstuffs in a healthy manner, and to save money:

- It may be used in special occasions,
 - to pack foodstuffs in airtight conditions thus prolonging their shelf life,
 - to prepare meals for an entire week,
 - to keep lettuces, vegetables, and herbs longer (they remain crunchy and fresh);

- more space is freed up in the freezer;
- foodstuffs are protected from drying out and oxidation;
- in this manner it is possible to marinate quickly and thoroughly (20 minutes in the vacuum is enough);
- in this manner it is also possible to repack meat products, sausages, and cheeses which were previously vacuum packed (the flavour is retained);
- money can be saved, as all leftovers can be preserved and consumed at a later time;
- all types of fruits and vegetables can be purchased in-season, vacuum packed, and in this manner preserved longer.

Vacuum packing assures protection for many various objects. Using this device it is possible to pack camping accessories such as matches and other objects which should remain dry. Also the dull bloom on silver and other collectible items may be eliminated through the vacuum packing.

5.3 Guidelines for vacuum packaging



CAUTION!

Vacuum packing is not a substitute for freezing. Any foodstuffs which spoil easily and needed to be frozen prior to vacuum packing must be cooled and frozen after vacuum packing.

Important hints

1. Prior to vacuum packing it is necessary to wash hands thoroughly, as well as all device and surfaces which will be used for the cutting and vacuum packing of foodstuffs.
2. Use gloves when possible.
3. Only fresh foodstuffs should be packaged.
4. Foodstuffs which spoil easily should be frozen immediately following vacuum packing and not left for long periods at room temperature.
5. Place the vacuum packages uniformly in the refrigerator or freezer in order to allow for quick freezing.
6. The foodstuffs removed from the package must be absolutely consumed before their expiry date, specified on the original package.
7. The vacuum package prolongs the shelf life of dried foodstuffs. Oxygen and heat cause foodstuffs of high fat content to go rancid. Shelf life of dry foodstuffs, such as nuts, coconuts, and muesli is also extended by vacuum packing. Store them in cool and dark place.

8. Fruits and vegetables, such as apples, bananas, potatoes, and root vegetables should be peeled prior to vacuum packing, as this will prolong their shelf lives.
9. Some vegetables, such as broccoli, cauliflower, and white cabbage emit gases when vacuum packed. For this reason it is necessary to blanch and freeze them.
10. In order to repack foodstuffs using vacuum packing after they have been removed from prior packing, it is necessary to follow the rules for storage of items in low temperatures after they have been opened.
11. Foodstuffs which spoil easily and have been reheated or taken from the refrigerator should be consumed immediately. Foodstuffs which have laid in the open for several hours should not be consumed, especially if they were prepared in thick sauces and stored in vacuum packing or other environments deprived of sufficient oxygen.
12. Soft and fragile products (fish, wild strawberries, etc.) should be initially frozen during the night. After the initial freezing they may be vacuum packed and finally placed in the freezer.

Vacuum packing for the freezer

- Through thoughtful packaging the device can help to extend the freshness of meals. It is necessary to pack foodstuffs in as fresh a state as possible.
- Fragile or easily deforming foodstuffs may become damaged during the vacuum packing of the fresh product. Fragile products (meat, fish, wild strawberries, sandwiches etc.) should be initially frozen. They may be frozen for 24 hours before the frost scorch occurs. After the initial freezing they may be vacuum packed in the bags and stored for a long time in a freezer in order to maintain their taste and nutrition values.
- In order to package liquid foodstuffs, like soups, sauces, or boiled dinners, it is necessary to first freeze them in appropriate containers and then vacuum pack them, returning them to the freezer for keeping.
- Fresh vegetables should be washed or peeled and briefly blanched in boiling water or microwave, but keeping their freshness and not allowing for overcooking. After cooling down vacuum pack in any portions.
- In order to package foodstuffs which are not frozen, it is necessary to use approx. 5cm more plastic film, because in freezing the foodstuffs expand in size. Meat and fish should be placed on a paper towel, and then vacuum packed together with the paper towel. In this manner juices from the foodstuffs are absorbed.
- Prior to packing foodstuffs such as tortilla, crepes, or hamburger patties, it is necessary to separate them with wax or baking paper. This makes it easier to later remove selected items and repack the rest for keeping in the freezer.

Vacuum packing for the refrigerator

- The meals may be prepared earlier in appropriate portions and stored as vacuum packed in the refrigerator, and then heat as required.

Vacuum packing for the food storage

- The vacuum packing may also be advantageous in case of foodstuffs which may be stored in the room temperature (coffee, flour, flour products, sugar, etc.). When such foodstuffs are not used for a few days, e.g. due to vacations, they should be protected by vacuum packing. It allows to maintain their freshness and protects them from the influence of temperature, mould, and insects.

Unfreezing of foodstuffs packed in the vacuum bags

- The vacuum packed foodstuffs like meat, fish, fruits and vegetables, or other fragile products, may be slowly unfrozen on the lowest refrigerator shelf.
- Bread and tortilla should be unfrozen in the room temperature.
- Soups and other liquid meals should be heated directly in the vacuum bag in the water bath until they are hot. Before unfreezing in the room temperature or heating in the water bath one corner of the vacuum bag should be cut in order to reduce vacuum and allow for successive steam outlet.
- The foodstuffs should be consumed soon after unfreezing. **Never** freeze them again.

Repacking of unpacked foodstuffs

- Many food products, like cheese or meat products, are sold in the trade vacuum packages. Their taste and freshness may be also maintained after packing by repacking in the vacuum bags.



CAUTION!

The foodstuffs removed from the package must be absolutely consumed before their expiry date, specified on the original package.

After repacking they should be stored with maximum caution and hygiene.

5.4 Operation

Before the first use

- Before the first use always thoroughly clean the device and its surfaces which will come into contact with food (vacuum bags, lid, etc.), according to the instructions included in **Section 6 “Cleaning”**.

5.4.1 Functions of control buttons / indicators



A. AUTO VAC/SEAL-DRY

Automatic vacuum packaging/sealing – dry: by pressing this button the device automatically starts the vacuum packaging process, shrinking the vacuum bag until reaching the maximum vacuum and finally seals the bag during a short sealing time. This function is intended for dry vacuum bags and food products devoid of moisture.

B. AUTO VAC/SEAL-MOIST

Automatic vacuum packaging/sealing – moist: by pressing this button the device automatically starts the vacuum packaging process, shrinking the vacuum bag until reaching the maximum vacuum and finally seals the bag during a long sealing time.

This function is intended for moist vacuum bags and food products including some moisture.

C. PULSE

Manual vacuum packaging – Pulse function: Vacuum pump sucks the air out of the vacuum bag as long as this button is pressed. You can press this button with any frequency until obtaining the desired effect.

D. SEAL ONLY


Sealing only: Vacuum is generated for a short time to ensure that the sealing strip and sealing bar are clean and will lay on top of each other. Finally, the bag is sealed during a long sealing time.

Press this button to select the following functions:

1. Sealing of an open end of the vacuum bag which is fed from the foil roll.
2. Stopping of the automatic function of **“Vacuum packaging & sealing”** and immediate sealing of the vacuum bag. This way, the user may control an internal vacuum inside the vacuum bag to avoid crushing delicate contents of the bag.

E. PROGRESS

Progress of individual functions is shown on the digital display.

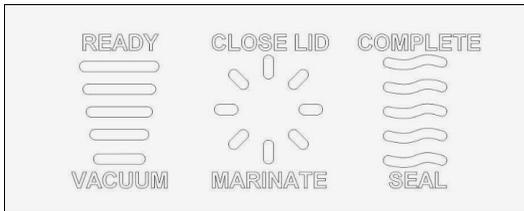

Progress of the vacuum packaging process



Progress of the sealing process



Progress of the marinating process

When the “**CLOSE LID**“ indicator is on, the lid is not closed. Remove handle to close the lid.

When the “**READY**“ indicator is on, you can start the selected function.

If the “**COMPLETE**“ indicator comes on, it means that the process has been completed.

F. MARINATE

Marinating function: Important: This function may be used only with an appropriate container and connecting hose.

After mounting the hose and container, the device produces the vacuum in the container for approx. 50 second and then for a moment again lets some air into the container.

If necessary repeat this process a few times.

G. CANISTER

Container function: Using the connecting hose the vacuum is produced in the container as long as the “**CANISTER**“ button on the control panel is pressed.

H. ACC PORT

Connecting hose port to carry out the vacuum packaging or marinating process in the vacuum containers.

J. CANCEL

After pressing the stop button, the currently executed process is stopped.

5.4.2 Vacuum packaging

Important advice and tips

- Do not leave too much air in the vacuum bag. Before sealing the vacuum bag, squeeze out as much air as possible from the bag. With too much air in the vacuum bag, the load on the vacuum pump may increase so much that the motor will not have enough power to suck all air out of the bag.
- In case of food products with sharp edges or corners, e.g. bones or dried noodles, such places should be padded with paper towels in order to avoid damaging the vacuum bag.
- Do not put too many food products in the vacuum bag. Leave enough space to allow easy insertion of an open end of the bag in the vacuum chamber.
- Always place the open end of the vacuum bag flat and evenly on the sealing strip, do not fold or bend the vacuum bag.
- Big vacuum bags which are not fully filled require longer vacuum packaging time; smaller bags may be vacuum packed faster.
- Always check seal seams to make sure that they are clear, even and were evenly applied.

Selection of vacuum bags

- Vacuum bags are delivered in various sizes. Select the size appropriate for food products to be packed. Make sure that the vacuum bag is at least 7 cm bigger than the packed product and include another 2 cm for successive use of the vacuum bag.



NOTE!

For vacuum packaging use only special vacuum packaging bags (one-side corrugated, extruded bags for vacuum packaging).

Making vacuum bags from foil rolls

- Select the foil roll of appropriate size to make a bag.
- Connect the device to a single grounded outlet.
- To switch the device on, set the ON/OFF switch on the control panel in “I” position.
- Open the rear cover. Place the foil roll in the groove intended for this purpose under the rear cover.

- Make sure that the blade is at one of the ends (right or left) of the cutting rail.
- Extend the foil roll to the required length and place on the cutting rail.
- Move the blade from one end to another in order to accurately and cleanly cut off the vacuum bag.



- Place the cut vacuum bag on the sealing strip up to the marked edge, and not inside the vacuum chamber.



- Close the front cover and firmly press the front handle to lock the cover.
- You will hear a beep sound, “**READY**“ indicator comes on and the device is ready to perform this function.
- Press the “**SEAL ONLY**“ button to seal the vacuum bag. The progress of the sealing process is shown on the digital display.
- After the sealing is finished a beep sound is heard, and the “**COMPLETE**“ indicator comes on.
- Lift the lid, open the front cover and remove the prepared vacuum bag from the device.
- Check both seals. It should have a uniform cross-section without any folds. In case of incomplete sealing, cut off the seam and repeat the entire vacuum packaging process.

Vacuum packaging using vacuum bags

- Place the food product to be packed in the vacuum bag.
- Clean the open end of the vacuum bag and make sure there is no food or liquid residues on it.
- Always place an open end of the vacuum bag flat and evenly spread on the sealing strip in the area of vacuum packaging, do not fold or bend the vacuum bag.
- Make sure that the air-suction holes are not covered by the vacuum bag.
- Close the front cover and press the front handle to lock the cover.
- To switch the device on, set the **ON/OFF** switch on the control panel in “I” position.
- You will hear a beep sound, “**READY**” indicator comes.
- Depending on the food products, select one of the functions for **automatic vacuum packaging / sealing** by pressing a relevant **AUTO VAC/SEAL-DRY** or **AUTO VAC/SEAL-MOIST** button on the control panel.
- The air is automatically sucked out of the vacuum bag which is then sealed. The progress of the vacuum packaging and sealing is shown on the digital display.
Tip: during vacuum packaging the device produces a very high vacuum in the vacuum bag. Supervise the process of vacuum packaging to avoid grinding or crushing of food products.
- To stop the process, after reaching the desired vacuum, immediately press the “**MANUAL SEAL**” button. The vacuum pump stops the process and the device switches to sealing of the vacuum bag.
- After the sealing is finished a beep sound is heard, and the “**COMPLETE**” indicator comes on.
- Lift the handle to open the front cover and remove the sealed vacuum bag from the device.
- **Tip:** to ensure optimum results of vacuum packaging, after each use wipe the fluids or food residues.
- To open the bag which has been vacuum packed cut it with scissors.

Vacuum packaging in vacuum bag with “Manual vacuum packaging” function / PULSE

- This function is used for packing delicate food products (such as tomatoes, chips and similar products), using low vacuum.
- Place the food product to be packed in the vacuum bag.
- Clean the open end of the vacuum bag and make sure there is no food or liquid residues on it.
- Always place an open end of the vacuum bag flat and evenly spread on the sealing strip in the area of vacuum packaging, do not fold or bend the vacuum bag
- Close the front cover and press the front handle to lock the cover.
- To switch the device on, set the ON/OFF switch on the control panel in “I” position.
- You will hear a beep sound, “**READY**” indicator comes.
- Press the “**PULSE**” button. As long as this button is pressed the air is sucked out. Monitor the vacuum level in the bag. When the desired vacuum in the bag is reached, release the „**PULSE**“ button. The process is stopped.
- Finally, press the “**SEAL ONLY**” button to seal the vacuum bag.
- Tip: If the “**PULSE**” button is released and the “**SEAL ONLY**” button is not pressed within 15 seconds, the vacuum bag loses vacuum and the process is finished.

Vacuum packaging using vacuum containers

- Fill the vacuum container with selected food products and leave at least 3 cm free from the top of the container.
- Clean the edge of the container and attach the lid.
- Connect the supplied connecting hose to the lid of the vacuum container and the appropriate “**ACC PORT**” on the control panel of the device.
- To switch the device on, set the ON/OFF switch on the control panel in “I” position.
- You will hear a beep sound, “**READY**” indicator comes.
- Press the “**CANISTER**” button in order to start the vacuum packaging process. To make sure that no air comes out between the lid and the vacuum container, press the lid down at the beginning of the vacuuming process.

- The device stops automatically when the sufficient vacuum has been reached in the vacuum container. The vacuum packaging process is finished.
- Close the lid lock and disconnect the connecting hose from the lid of the vacuum container and from the device.
- **Hint:** When moist food products are packed to the vacuum container, the moisture may gather on the connecting hose port. Clean the port after each use.
- Use only appropriate vacuum containers and observe manufacturer's instructions regarding opening and closing vacuum containers.

Marinating in the vacuum container

- Fill the vacuum container with selected food products and leave at least 3 cm free from the top of the container.
- Clean the edge of the container and attach the lid.
- Connect the supplied connecting hose to the lid of the vacuum container and the appropriate **"ACC PORT"** on the control panel of the device.
- To switch the device on, set the ON/OFF switch on the control panel in **"I"** position.
- You will hear a beep sound, **"READY"** indicator comes.
- Press the **"MARINATE"** button in order to start the marinating process. The progress of the marinating process is shown on the digital display.
- To make sure that no air comes out between the lid and the vacuum container, press the lid down at the beginning of the vacuuming process.
- The device produces the vacuum in the container for approx. 50 second and then for a moment it again lets some air into the container. If necessary repeat this process a few times.
- After the marinating process is finished, the **"COMPLETE"** indicator comes on.
- Press down the container lid or connecting hose on the **"ACC PORT"**, to make sure that no moisture escapes.
- Pull back the connecting hose from the container and the device. Disconnect the hose and make sure that no air escapes through the gaps between cables.
- To check the vacuum quality, pull the container lid. It cannot move.

6. Cleaning



WARNING!

Before cleaning, switch the device off using the ON/OFF switch and disconnect it from the power supply (pull the plug!).

The device is not suited for direct washing via water jets. Protect the device from the water penetration.

- Do not use **any** sharp metallic tools (e.g. scissors, knives or scrapers) for removing contamination, as they may damage the surface.
- Do not use chlorine, hydrochloric, hydrofluoric or sulphuric acid-based cleaning agents (like e.g. some descaling products).

Exterior of the device

- Clean the device regularly.
- Before and after use clean the outer surfaces of the device with a cloth or sponge and mild cleaning agent. **Do not use aggressive cleaning agents, solvents or products based on the aromatic essences!**

Interior of the device

- If any food or liquid residues gather on the sealing strip or the sealing bar, remove them with a paper towel.
- Wipe the vacuum chamber with a soft moistened cloth.

Vacuum containers

- When cleaning the vacuum containers and container lids observe the recommendations included in the operating manual of a given accessory.
- Make sure that all the accessories are clean and ready for further use.

Storing the device

- If the device is not used for a long time, clean it according to the above description and store in a dry, clean place, protected against cold, sun and, children. Do not place any heavy objects on the device.

7. Possible Malfunctions

In case of malfunction, disconnect the device from its power source. Before contacting the service or sales agent, verify - based on the table below - whether it is possible to eliminate disruption in operation.

Problem	Possible cause and solution
The device does not work	Check if the supply plug is correctly connected to the socket. Check the socket by connecting another device to it.
	Check the power cord for damages. In case it is damaged do not use the device. Contact the technical support.
	Make sure that the ON/OFF switch has been pressed properly.
The device does not produce complete vacuum in the bags	To ensure correct sealing, the open end of the vacuum bag must be smooth (no folds) and rest properly on the sealing strip in the vacuum chamber.
	Vacuuming time is too short. Repeat the vacuum packaging process.
	Check the sealing strip and the sealing bar for contamination. Clean if necessary.
	The vacuum packaging bag may be punctured. To check it, seal the bag with some air inside, immerse in water and squeeze. Air bubbles indicate that the bag is not tight. Seal the packaging bag again or use another one.

Problem	Possible cause and solution
The vacuum bag loses vacuum after sealing	The sealing may be incomplete due to folds, crumbs, fat, or moisture. Reopen the vacuum packing bag, clean the upper part of its interior, remove all foreign objects from the sealing strip, and repeat the sealing operation.
	Check the bag for damages which may cause the vacuum loss. Cover the sharp edges of the bag content with the paper towel.
	The vacuum bag has been incorrectly placed on the sealing strip. Always make sure that during the sealing process, the entire vacuum bag is always lying flat on the sealing strip.
The device does not produce vacuum in the vacuum chamber	Check the seal of the lid for damages or contamination. Clean the seal or replace it with a new seal.
The device does not produce complete vacuum in the vacuum container	The connection hose is not connected properly to the vacuum container lid or to the connector of the device intended for vacuum containers.
	The lock of the vacuum container lid is not open.
	The vacuum container is overfilled. Leave at least 3 cm between the rim of the container and the contents.

If you cannot remove the malfunctions:

- do not open the body,
- notify the customer service point or contact the sales agent, while providing the following information:
 - type of malfunction;
 - code number and serial number (see identification plate on device underside);
 - date of purchase.

8. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.