

# TS60



100197



**ENGLISH**

**Table of contents**

- 1. Safety..... 20
  - 1.1. Warning symbols explanation..... 20
  - 1.2. Safety instructions ..... 21
  - 1.3. Use as intended..... 24
  - 1.4. Use against the intended purpose ..... 24
- 2. General information..... 25
  - 2.1. Manufacturer Liability and Warranties ..... 25
  - 2.2. Copyright ..... 25
  - 2.3. CE Declaration of Conformity ..... 25
- 3. Transport, packaging and storage..... 26
  - 3.1. Delivery check ..... 26
  - 3.2. Packaging..... 26
  - 3.3. Storage..... 26
- 4. Technical data..... 27
  - 4.1. Technical specification..... 27
  - 4.2. List of components..... 28
- 5. Installation and operation ..... 29
  - 5.1. Installation ..... 29
    - 5.1.1. Location ..... 29
    - 5.1.2. Connection..... 29
  - 5.2. Operation..... 30
    - 5.2.1. Important tips for optimal toast result..... 30
    - 5.2.2. Toasting..... 31
    - 5.2.3. Turn off before the set time..... 32
    - 5.2.4. Stuck bread slices..... 33
- 6. Cleaning ..... 34
  - 6.1. Cleaning of removable crumb tray ..... 35
  - 6.2. Storage ..... 35
- 7. Disposal ..... 36



**Read these instruction manual before using and keep it available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the appliance and should be consulted as an important source of information and reference guide. The knowledge of all the operational and safety instructions included in this manual is the pre-condition for the safe and proper dealing with the appliance. Furthermore, local regulations for health and safety protection and accident prevention should be observed. This instruction manual is an integral element of the product and should be stored in the direct vicinity of the appliance so that it would be available to the persons who install, operate, do maintenance work or clean the appliance. In case the appliance is operated by third parties it is necessary to provide them with this instruction manual.

## 1. Safety

This appliance is designed in accordance with the current technical standards. However, the appliance may be a source of dangers, if used improperly or against its intended purpose. All the users must follow the information included in this instruction manual and observe the health and safety guidelines.

### 1.1. Warning symbols explanation

Important safety information and warning information are indicated in this instruction manual by appropriate warning symbols. You must strictly comply with the information to prevent accidents, personal injury and damage.



#### **DANGER**

The warning symbol **DANGER** warns against a risk of severe injury or fatality, if not prevented.



#### **CAUTION**

The warning symbol **CAUTION** warns against a risk of minor or moderate injury, if not prevented.



#### **WARNING**

The warning symbol **WARNING** warns against a risk of severe or medium injury or fatality, if not prevented.



#### **WARNING - HOT SURFACE**

The warning symbol **WARNING - HOT SURFACE** warns against a risk that may cause personal injury, i.e. burns, if not prevented.

### NOTE

The warning symbol **NOTE** warns against material damage.



The symbol **INFORMATION** present information and guidelines to the user about the use of the appliance.

## 1.2. Safety instructions

### Risk of fatal electric shock!

- Too a high mains voltage or incorrect installations may cause electric shock.
- Connect the appliance to an easily accessible power supply socket so that in case of defect it is possible to immediately disconnect the appliance from the power supply.
- The appliance may be connected only when the information on the rating plate correspond with the mains voltage.
- The damaged power supply cord can be changed by the manufacturer or qualified staff only.
- Any repairs or housing opening may be carried out by professionals and relevant workshop only.

### Power supply cord and plug

- Do not transport the appliance by holding the power supply cord.
- Do not use the appliance when the power supply cord or plug are visibly damaged or are broken.
- Never allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch or knot the power supply cord.
- Always completely unwind the power supply cord.
- Never place the appliance or other objects on the power supply cord.
- Always hold of the plug to disconnect the appliance from the power supply.
- Do not connect the appliance to the multi-socket.

### Risk of fatal short-circuit!

- Store the appliance so that it may not fall down to water e. g. in a washbasin or bath tube.
- Never hold of the appliance if it has fallen into water. In such the case, unplug immediately.
- Never immerse the appliance in water or other liquids.
- Liquids in the appliance may cause short-circuit.
- Use the appliance in the dry surrounding and indoors only.
- When cleaning, unplug the appliance.
- Do not touch the plug with wet hands.

## **Risk to life due to lack of experience and knowledge!**

- The appliance can be used by children of 8 years old and older, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the appliance and its possible dangers.
- Do not leave the appliance unattended and in the presence of children.
- Keep the packing films and polystyrene foam elements away from children. The children may get embroiled and suffocate.
- Do not leave the appliance unattended during operation.
- Cleaning and maintenance may not be carried out by children or persons with limited physical, sensory or mental capabilities.

## **Health hazard due to burnt food!**

- Acrylamide that is present in burnt pieces of bread for example may cause cancer.
- Do not brown bread excessively.
- Remove the burnt pieces.

## **Risk of burns by hot surfaces!**

- The surface of the appliance becomes hot during operation. The high temperature remains for some time after the appliance has been switched off.
- Do not insert the hands into the toast slots or touch any surface of the appliance.
- You can transport or clean the appliance only when it has cooled down completely.

## **Risk of fire due to flammable food and materials!**

- Toast bread may catch fire.
- Any flammable objects in the vicinity of the appliance may ignite.
- Do not locate the appliance in the vicinity of the inflammable materials or underneath. The appliance must be monitored.
- Do not use the appliance in the immediate vicinity of the heat source and hot surfaces.
- Do not place any inflammable or flammable objects on the hot surface or the appliance.
- Do not cover the appliance with b e. g. aluminium foil or clothes.
- Clean the appliance and empty the crumb tray regularly to prevent the risk of fire.
- In case of fire, remove the plug from the socket before the fire extinguishing activities. When the fire has been extinguished ensure sufficient fresh air inflow. Never use water for fire extinguishing when the appliance is connected to the power supply.

### **Risk of damage due to improper operation!**

- Incorrect handling may cause damage to the appliance.
- Never expose the appliance to high temperature (a cooker, etc.) or weather conditions (rain, etc.).
- Do not use the appliance or place on a hot surface, e. g. on a cooktop or near open fire.
- Do not allow that the power supply cord hangs above the edge of the working surface.
- Use the appliance only when it is positioned on an even, stable, and heat-resistant surface.
- Use the appliance with the crumb tray only.
- Do not use the appliance with the external timer or remote control.
- In case the toast bread stuck in the toast slot unplug the appliance and leave the appliance to cool down.
- Use the appliance only in the standing position.
- Do not place the appliance under the kitchen cupboards. The cupboards may be damaged due to the hot air flowing up.
- Do not immerse the appliance in water or other liquids during cleaning.
- Do not use any scouring agents that include solvents or corrosive cleaning agents for cleaning. They may damage the surface.

## 1.3. Use as intended

Every use of the appliance for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose. The safe operation of the appliance is guaranteed only when used according to its intended use and the information included in this instruction manual.



### **The appliance is not intended for continued industrial application.**

The appliance is intended for use in household and similar places:

- in factory kitchens, in shops, offices, and other similar working environments,
- in farm houses,
- by customers in hotels, motels, bed & breakfasts, and other typical residential environments.

### **The appliance is only intended for toasting slices of bread.**

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible. The liability for damage occurred during the use of the appliance against its intended purpose is borne solely and exclusively by the user.

## 1.4. Use against the intended purpose

Any use other than those mentioned in point 1.3. "Use as intended", is assumed as the use against the intended purpose and is not allowed. The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the appliance to perform only the work described in the instruction manual. Any manipulation with the appliance, assembly or maintenance work may be performed exclusively by the authorized service staff. Incorrect handling may cause damage to the appliance.

It is not allowed to use the appliance for:

- baking bread rolls,
- reheating of the already toasted bread,
- bagel toasting
- toasting frozen bread,
- toasting spread slices of bread (e.g. sandwiches), bakery goods with filling or coating (e.g. jam or icing).

## 2. General information

### 2.1. Manufacturer Liability and Warranties

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years. If the order consists of a special model or includes additional options, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case when the state-of-the-art technical solutions have been applied.



#### CAUTION!

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause injury or damage.

The manufacturer **is not liable for** any damage or faults caused when:

- you do not follow the instructions,
- you use the appliance against the intended purpose,
- alterations are made by the user,
- inappropriate spare parts are used.

We reserve the right to introduce technical modifications to the product which are intended for improvement of the appliance and its performance.

### 2.2. Copyright

This instruction manual and included text, drawings, images or other illustrations are copyrighted. This instruction manual, including any extracts, – may not be reproduced in any form or by any means, or transmitted to or used by third parties – without permission in writing from the manufacturer. Breach of the above results in payment of compensation. We reserve the right to pursue further claims.

The illustrations included in this instruction manual may slightly vary from the actual realization of the appliance.

### 2.3. CE Declaration of Conformity



The appliance meets the applicable standards and guidance of the European Union. We confirm the above in the CE Declaration of Conformity. If required, we will be pleased to send you the relevant Declaration of Conformity.

### **3. Transport, packaging and storage**

#### **3.1. Delivery check**

Check the delivery upon completeness and transport damage immediately after receipt. In case of visible transport damage refuse to accept the receipt or conditionally accept the receipt. Note the scope of damage on the transport documents/consignment list of the shipping company and place a complain. Hidden damage must be reported immediately upon its discovery as compensation claims may only be presented within the applicable time-limits.

#### **3.2. Packaging**

The packaging and its elements are made of recyclable materials. Particularly, plastic films and bags, cardboard boxes. Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when sending the appliance to our service point in case of any defaults. Before you start the appliance, completely discard any external or internal packaging material. Check that the unit and all accessories are present. If you find that something is missing, please contact our Customer Service Department. When managing the packaging observe the applicable domestic law. Introduce the recyclable packaging materials to recycling.

#### **3.3. Storage**

Leave the packaging closed until installation of the appliance, and follow the external indications as to the location and storage. Store the packaging only in the following conditions:

- not outdoors,
- in dry and dust free surroundings,
- away from aggressive agents,
- not exposed to direct sunlight,
- protected against mechanical shocks.

In case of longer storage time (> 3 months) check the general state of all the elements and packaging and refresh or renew, if necessary.

## 4. Technical data

### 4.1. Technical specification

<b>Name</b>	<b>Toaster TS60</b>
Art. no.:	<b>100197</b>
Material:	stainless steel
Realization:	<ul style="list-style-type: none"><li>• Feature: toasting</li><li>• Designed for:<ul style="list-style-type: none"><li>- Toasts</li><li>- Sandwich toasts</li></ul></li><li>• Operation<ul style="list-style-type: none"><li>- 1 lever handling 6 slots (manual release)</li><li>- Selector switch to choose a toast slot, grouped by 2</li></ul></li><li>• Heating indicator light</li><li>• Crumb tray, removable</li></ul>
Number of toast slots	6
Slot size:	W 145 x D 20 x H 135 mm
Timer:	Time setting: 1-5 minutes, acoustic sound after the end of set time
Power supply:	2.5 kW / 230 V 50 Hz
Power consumption at 230V:	2 slices: 1100W 4 slices: 1800W 6 slices 2500W
Dimensions:	W 405 x D 245 x H 225 mm
Weight:	5.65 kg

We reserve the right to technical modifications.

## 4.2. List of components



- 1 Timer
- 2 Heating indicator light (red)
- 3 Selector switch
- 4 Operating lever
- 5 Removable crumb tray

- 6 Rubber feet (4)
- 7 Ventilation slots
- 8 Housing
- 9 Toast slot (6)

## 5. Installation and operation

### 5.1. Installation

#### 5.1.1. Location

- Remove the appliance from the packaging and discard all the packing materials.
- Never remove the rating plate or any warning signs from the device.
- The installation place must be easily accessible and sufficiently spacious to allow easy operation of the appliance and good air circulation.
- Allow 10 cm space at the sides and at the rear away from the walls and other objects.
- In case of the smaller space place the protective elements, e. g. heat resistant film.
- Locate the appliance in a well-ventilated room.
- Place the appliance on top of an even, stable, dry, and water and heat resistant surface.
- Never place the appliance directly underneath a hanging cupboard as hot air moves upwards.
- Never use the appliance at the edge of a table as the appliance may fall over and down.
- Locate the appliance so that the plug is easily accessible and can be quickly disconnected from the power supply, if necessary.
- Remove the protective film from the appliance before use. Remove the film slowly in order not to leave the glue residues. Any glue residues may be removed with the use of proper solvent.
- Insert the crumb tray into the provided slot underneath the appliance.

#### 5.1.2. Connection



**DANGER!**

**Risk of fatal electric shock!**

Incorrect electric installations or too high mains voltage may cause electric shock.

- Connect the appliance to a single grounded socket with 16A protection

1. Verify if the technical specification of the appliance (see the rating plate) correspond to the local electricity grid.
2. Position the appliance.
3. Fully unwind the power supply cord.
4. Plug in to the grounded socket.  
The appliance is ready for use.

## 5.2. Operation

### 5.2.1. Important tips for optimal toast result

At the same settings of the browning level, the toasting result varies depending on the different characteristics of bread (moisture, type of bread, size and thickness of the slices).

- Set shorter toasting time when toasting dry, smaller or thinner slices or when toasting only one slice.
- Set longer browning time or carry out 2 toasting processes when toasting thicker slices of bread.
- The cut surface of the bread should be as smooth as possible in order to achieve a uniform toasting result.
- Remove loose crumbs or protruding bread components, e.g. grains, before toasting because they can burn.
- Let longer browning time for the slices with an uneven surface.
- For the uniform result of toasting toast one type of bread at a time.
- Recommended toasting time is approx. 3 min.
- Take into account that during several operations one after another the toaster becomes hotter and the toasted slices become darker accordingly. Select shorter browning time for next toast processes, if necessary.
- The level of browning can be changed also during the toasting process by turning the browning control.

## 5.2.2. Toasting

### NOTE!

Incorrect use may cause damage.

- Only use the appliance with the inserted crumb tray to prevent damage to the appliance and avoid crumb dirt.

1. Make sure that there are no packaging materials or other objects left in the appliance.
2. Position the appliance according to the description.
3. Insert the crumb tray (5) into the provided slot underneath the appliance.
4. Connect the plug with the socket outlet installed according to the regulations. .



toast slots (9) that may be selected are indicated next to the selector switch (3).

5. Select the number of the toast slots (9) that are to be heated with the selector switch (3).
6. Insert the bread slices to the toast slots (9).

Turn the Timer (1) clockwise to intensify the browning. Turn Timer (1) anti-clockwise to reduce the browning.



Take into account that during several operations one after another the toaster becomes hotter and the toast slices become darker accordingly.



### WARNING - HOT SURFACE

#### Risk of burns by hot surfaces!

The toaster becomes hot during operation.

- Do not touch the surface or insert your hands into the toast slots.

7. Press the operating lever (4) upwards  until it is blocked.
8. Turn the Timer (1) clockwise to set a desired browning time, between 1 and 5 minutes. The red heating indicator light (2) is on and the appliance is heating up.
9. The acoustic signal sounds when the toasting process has finished. The red heating indicator light (2) is off, the heating is switched off and the Timer (1) is in its **OFF** position.

10. Press the operating lever (4) downwards. The bread slices become lifted from the toast slots (9).



## WARNING!

### **Risk of fire as a result of continued operation!**

The bread slices may burn.

- Move the operating lever to lift the bread from the toast slots.



## WARNING - HOT SURFACE

### **Risk of burns by hot surfaces!**

The surfaces remain hot after operation.

- You can move or transport the appliance when it has cooled down completely.

11. Leave the appliance to cool down completely.

12. Pull the plug from the socket.

### **5.2.3. Turn off before the set time**

Finish of the toasting process before the set time:



## WARNING - HOT SURFACE

### **Risk of burns by hot surfaces!**

The toaster switches off after the set time has elapsed.

- Do not touch any surfaces.

1. Turn the Timer (1) anti-clockwise to its **OFF** position. The red heating indicator light (2) is off, the appliance is switched off.

2. Press the operating lever (4) downwards . The bread slices become lifted from the toast slots (9).

3. Remove the bread slices.



## WARNING - HOT SURFACE

### **Risk of burns by hot surfaces!**

The surfaces remain hot after operation.

- You can move or transport the appliance when it has cooled down completely.

4. Leave the appliance to cool down completely.

5. Pull the plug from the socket.

#### 5.2.4. Stuck bread slices.



Pay attention that the slices are not too thick.



#### **WARNING!**

##### **Risk of fire due to stuck bread slices.**

The bread may start to burn.

- Remove the stuck bread immediately.

Remove the stuck slice of bread from the toast slot:

1. Turn the Timer (1) anti-clockwise to its **OFF** position. The red heating indicator light (2) is off, the appliance is switched off.
2. Pull the plug from the socket.



#### **WARNING - HOT SURFACE**

##### **Risk of burns by hot surfaces!**

The surfaces remain hot after operation.

- Remove the stuck bread only when it has cooled down.

3. Let the appliance cool down completely.



#### **WARNING!**

Do not use any sharp metal objects to remove the stuck toast bread. The sharp objects may damage the heating elements and when in contact with the live parts may cause electric shock.

4. Turn the appliance by 180° and shake slightly to remove the stuck slices of bread from the toast slots (9).
5. Carefully remove the stuck bread.

## 6. Cleaning



### WARNING!

#### Risk of short-circuit due to water!

Water in the toaster may cause short-circuit.

- Do not let any water to the toaster.

The appliance is not designed for flushing with direct water jet. The appliance is not suited for direct washing via water jets.

### NOTE!

Incorrect use may cause damage.

- Never use aggressive cleaning agents to clean the appliance.
- Never poke around with any sharp objects in the toast slots to remove bread crumbs.

Regular cleaning:

1. Turn the Timer (1) anti-clockwise to its **OFF** position. The red heating indicator light (2) is off, the appliance is switched off.
2. Pull the plug from the socket.



### WARNING - HOT SURFACE

#### Risk of burns by hot surfaces!

The surfaces remain hot after operation.

- You can move or transport the appliance when it has cooled down completely.

3. Leave the appliance to cool down completely.
4. Turn the appliance by 180° and shake slightly to remove the bread crumbs from the toast slots (9).
5. Wipe the housing (8) of the toaster with a soft, damp cloth and a cleaning agent.
6. Dry the housing (8) thoroughly using a soft cloth.
7. Leave the appliance to dry completely before restarting.

## 6.1. Cleaning of removable crumb tray

### NOTE!

Incorrect use may cause damage.

- Only use the appliance with the inserted crumb tray to prevent damage to the appliance or crumb dirt.
- Empty and clean the crumb tray regularly.




### WARNING - HOT SURFACE

#### Risk of burns by hot surfaces!

The surfaces remain hot after operation.

- You can move or transport the appliance when it has cooled down completely.

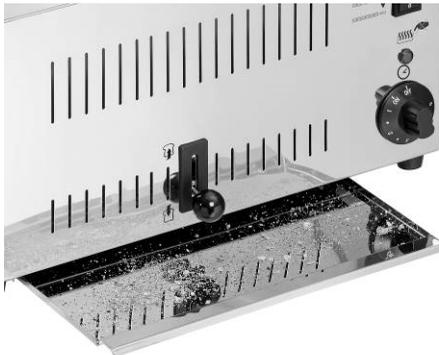

The appliance is provided with the removable crumb tray located in the lower part of the appliance.

1. Remove the crumb tray (5) from the slot underneath the appliance.
2. Clean the crumb tray (5) with a dry or slightly damp, soft cloth and dry it.
3. Insert the crumb tray (5) into the provided slot underneath the appliance.

## 6.2. Storage

If the unit is to remain unused for a longer period of time, clean it according to the instructions and store in a dry, clean place, safe from frost and sun and inaccessible to children. Do not place any heavy objects on the appliance.

## 7. Disposal

### Old appliances



The electric appliances are marked with this symbol. You must not dispose of electric appliances with household waste. When the appliance may not be longer used each consumer is obliged to dispose of the appliance at the dedicated local collection point, separately from household waste.

#### **NOTE!**

Electric appliances should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the appliance from the power supply and remove the power cord from the appliance with the use of diagonal pliers.