

# TA720



103076

**ENGLISH**

**Table of contents**

**1. Safety ..... 18**  
1.1 Key to symbols ..... 18  
1.2 Safety instructions ..... 19  
1.3 Use as intended ..... 23  
1.4 Use against the intended purpose ..... 23

**2. General information ..... 24**  
2.1 Liability and Warrantees ..... 24  
2.2 Copyright protection ..... 24  
2.3 Declaration of conformity ..... 24

**3. Transport, packaging and storage..... 25**  
3.1 Delivery check ..... 25  
3.2 Packaging..... 25  
3.3 Storage..... 25

**4. Technical data ..... 26**  
4.1 Overview of parts ..... 26  
4.2 Technical specification ..... 27

**5. Installation and operation..... 28**  
5.1 Installation ..... 28  
5.2 Operation..... 29

**6. Cleaning ..... 31**

**7. Waste disposal ..... 32**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**DANGER!**

This symbol highlights hazards which could lead to injury.



**WARNING!**

This symbol highlights dangerous situations which could lead to injury or death.



### HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



### CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



### NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

## 1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- **Never** leave the device unattended when in use.
- Only use the device indoors.

- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



## **DANGER! Electric shock hazard!**

To avoid the hazard results please follow the instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range and do not immerse it into water or other liquids.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard will occur**.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



## **HOT SURFACE! Burn hazard!**

To avoid the hazard results please follow the instructions below.

- The body of the device and storage spaces become very hot during the operation of the device. Do not touch hot elements of the device.
- The device remains hot still for some time after it has been switched off. Before cleaning or moving the device to another place, let it cool down completely.



## **WARNING! Fire or explosion hazard!**

To avoid the hazard results please follow the instructions below.

- To avoid fire hazard and damage of the device, **never** place the kitchen utensils, towels, paper etc. on the device surface.
- **Never** use the device near flammable or inflammable materials (such as alcohol, spirits, petrol, etc). High temperature may cause their evaporation and due to contact with the ignition sources the explosion may occur, and it may result in personal injuries and material damage.
- In case of fire and before taking relevant fire extinguishing action, disconnect the device from the electric power supply (unplug!).

**Caution: Never use water for fire extinguishing when the device is connected to the power supply. Electric shock hazard!**

When the fire has been extinguished ensure sufficient fresh air inflow.

### 1.3 Use as intended

Every use of the device for a different purpose and/or in a way that diverges from the intended use is not allowed and is assumed as the use against the intended purpose.

Any claims against the manufacturer or their authorized representatives as a consequence of experiencing damage resulting from the use against the intended purpose are inadmissible.

The liability for damage occurred during the use of the device against its intended purpose is borne solely and exclusively by the user.

Safety operation of the device is guaranteed only when it is used for its intended purpose and according to the instructions included in this manual.

**The cup warmer is only intended to heat and keep cups warm.**

### 1.4 Use against the intended purpose

Any use other than those mentioned in point “**1.3 Use as intended**“ is assumed as the use against the intended purpose and is not allowed.

The use against the intended purpose may lead to severe injury or damage caused by hazardous voltage, fire or high temperature. It is allowed to use the device to perform only the work described in the instruction manual. Improper use may cause the device damage.

Any manipulation with the device, assembly or maintenance work may be performed exclusively by the authorized service staff.

## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### **CAUTION!**

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

## 3. Transport, packaging and storage

### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

### 3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

## 4. Technical data

### 4.1 Overview of parts

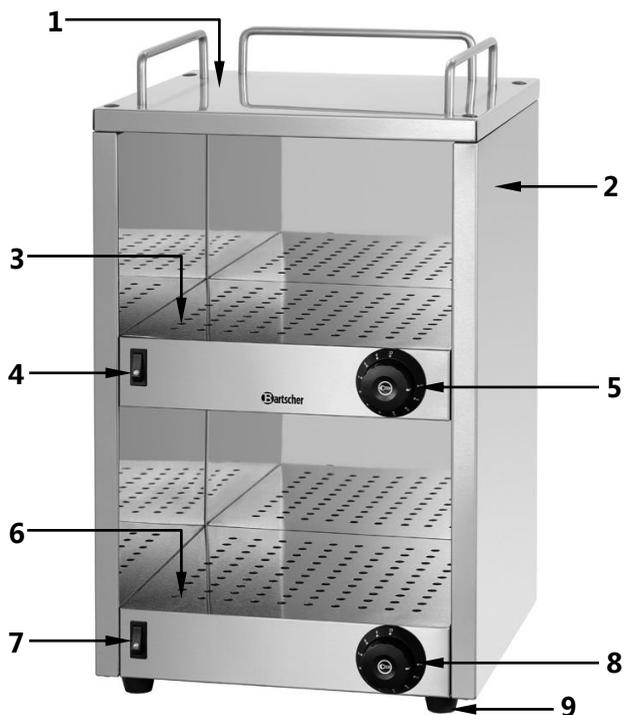

- 1 Unheated storage space
- 2 Body
- 3 Upper surface for cups
- 4 ON/OFF switch of the upper surface for cups
- 5 Temperature control knob of the upper surface for cups
- 6 Lower surface for cups
- 7 ON/OFF switch of the lower surface for cups
- 8 Temperature control knob of the lower surface for cups
- 9 Feet (4x)

## 4.2 Technical specification

Description	Cup warmer TA720
Code No.:	<b>103076</b>
Material:	Stainless steel
Model:	<ul style="list-style-type: none"><li>▪ Max. cup capacity.: 72 cups</li><li>▪ ON/OFF switch</li><li>▪ Features:<ul style="list-style-type: none"><li>- Unheated storage space on the top of the device, W 250 x D 250 mm</li><li>- Separately switched and regulated heat supply to upper and lower surfaces for cups</li></ul></li></ul>
Temperature range:	up to 60 °C
Power supply:	0.14 kW / 230 V 50/60 Hz
Dimensions:	W 320 x D 345 x H 550 mm
Size of the upper and lower surfaces for cups:	each: W 280 x D 295 x H 175 mm
Weight:	10.5 kg

We reserve the right to make technical changes!

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device, remove and dispose of all package material according to the environment protection regulations.



#### **CAUTION!**

**Never remove the nameplate and warning signs from the device.**

- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- Do not place the device near open flame, electric heaters or other heat source.
- **Never** place the device at the edge of a table to avoid tilting or falling.
- **Never** put the device in a moist or wet area.
- Always keep the working area around the device clean and dry.
- Never dry towels on the device. This may disturb an internal air circulation and result in damaging the device due to overheating.
- When locating the device, make sure the power plug is easily accessible to immediately unplug the device, if necessary.

#### Connection



#### **DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation!**

**Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

## 5.2 Operation

- Before use, clean the device according to the instructions set out in point 6 “Cleaning”.

- Prepare appropriate cups. Prior to filling the device, the cups must be cleaned and dried. Place them upside down on the intended surfaces for cups.
- The cup warmer has two directly heated surfaces for cups, each measuring 280 x 295 mm. Height of this surface is 175 mm.
- Each surface for cups is equipped with a separate ON/OFF switch and temperature control knob. Heating power of each surface is 70 W.
- The upper unheated storage space may be used for placing saucers or cups.



- Plug the device into a single grounded socket.
- Using appropriate **ON/OFF** switch turn the relevant surface for cups on. Green lamp will come on.

- Set the desired temperature for each surface for cups by turning the temperature control knob within the range from 1 to 10.



- The cup warmer is heated automatically (up to approx. 60 °C at the highest 10 setting of the temperature control knob). The cups are kept warm as long as the device is in operation.



**Fill the surface for cups with one layer of cups to achieve an optimum degree of warming.**

- Remove cups as needed.



**HOT SURFACE! Risk of burns!**

**During operation some elements of the device become very hot. Do not touch hot elements to avoid burns.**

**Hold the cups by ears while removing them from the device.**

- When refilling the device, make sure that the cups are dry and clean. If any water enters the surface, wipe it dry immediately.



**WARNING! Injury hazard!**

**Never use the device when there is a liquid on it or inside.**

**To prevent injury through electricity, burn or damage to the device, never touch the device and immediately disconnect it from the power supply (pull the plug!).**

- If the device is not in use, turn the **ON/OFF** switches to “**O**” and pull the plug from the power socket.

## 6. Cleaning



### **WARNING!**

Before cleaning, turn the device off using ON/OFF switches (set them to “O”) and disconnect it from the power supply (pull the plug!).

Leave the device to cool down completely.

The device is not suited for direct washing via water jets!

Protect the device from water penetration.



### **CAUTION!**

Do not use any aggressive or bleaching cleaning agents containing active oxygen, chlorine or corrosive components.

Do not use any abrasive or scouring cleaning agents, such as steel wool, steel wool containing soap, metal / plastic sponges or similar agents with abrasive surface

- Clean the device regularly.
- Clean the body and surfaces for cups with a soft, moist cloth using a mild cleaning agent and thoroughly dry them afterwards.
- Always use a soft cloth and never use coarse cleaning agents that could damage or scratch the surface of the device.
- After cleaning, use a soft, dry cloth to wipe down and dry the surface of the device.

### **Storing of the device**

- If the device is not used for a longer time, clean it thoroughly according to the instructions above and store it in a dry, clean place, protected from cold, sunlight, and children. Do not place any heavy objects on the device.

## 7. Waste disposal

### Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



### NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.