



**130206**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 5.0

Date of preparation: 2019-07-15

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of signal words .....	2
1.2	Safety instructions.....	3
1.3	Intended use .....	5
1.4	Unintended Use .....	5
2	General information .....	6
2.1	Liability and warranty .....	6
2.2	Copyright protection.....	6
2.3	Declaration of conformity .....	6
3	Transport, packaging and storage .....	7
3.1	Delivery Check.....	7
3.2	Packaging .....	7
3.3	Storage .....	7
4	Technical data .....	8
4.1	Technical specifications .....	8
4.2	List of components of the appliance.....	9
4.3	Functions of the appliance .....	9
5	Installation and operation .....	10
5.1	Installation.....	10
5.2	Operation .....	11
6	Cleaning .....	16
6.1	Safety Instructions for cleaning .....	16
6.2	Cleaning.....	16
7	Disposal.....	17



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of signal words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



**WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.

**CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

**IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

**NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.

## Supervised usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

## Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

## Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

### 1.3 Intended use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Mixing, pureeing, chopping, beating and stirring of suitable food products.

### 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Chopping of frozen food products.
- Chopping of very hard food products, e.g. ice cubes, nutmeg, coffee grains or cereals.

## 2 General information

### 2.1 Liability and warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

EN

### 2.2 Copyright protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

## 3 Transport, packaging and storage

### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical data

### 4.1 Technical specifications

<b>Name:</b>	<b>Stick mixer</b>
Item No.:	<b>130206</b>
Material:	stainless steel
Mixing bar length, in mm:	207
Speed levels:	5
Maximum rotational speed of mixer, in RPMs:	17000
Maximum rotational speed of whisk, in RPMs:	17000
Power supply:	0,7 kW / 230 V / 50 Hz
Dimensions (W x D x H) in mm:	200 x 150 x 410
Weight in kg:	1,05

EN

We reserve the right to implement technical modifications!

### Version / Characteristics

- Detachable mixing stick
- Easy switching between various functions
- ON/OFF button
- Ergonomic design
- The set includes: 1 wall mount

## 4.2 List of components of the appliance

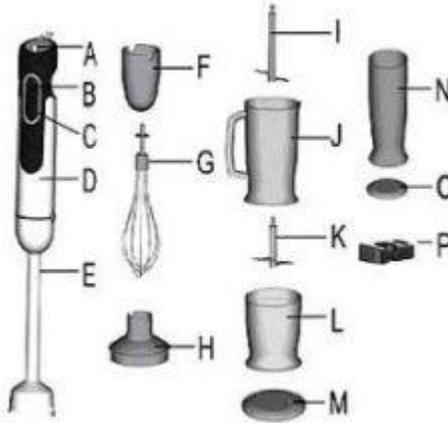


Fig. 1

- |  |  |
|--|--|
| <b>A</b> Speed control                                 | <b>I</b> Sickle blade for special container, 1.250 ml          |
| <b>B</b> Switch I                                      | <b>J</b> Special container, 1.250 ml                           |
| <b>C</b> Switch II                                     | <b>K</b> Sickle blade for special container, 500 ml            |
| <b>D</b> Motor block                                   | <b>L</b> Special container, 500 ml                             |
| <b>E</b> Mixing stick                                  | <b>M</b> Anti-slip pad for special containers, 500 ml+1.250 ml |
| <b>F</b> Whisk holder                                  | <b>N</b> Mixing container, 800 ml                              |
| <b>G</b> Whisk   | <b>O</b> Anti-slip pad for mixing container, 800 ml            |
| <b>H</b> Lid for special containers, 500 ml + 1.250 ml | <b>P</b> Wall mount  |

## 4.3 Functions of the appliance

The stick mixer set features numerous applications thanks to easy switching over of accessories for various functions (mixing, pureeing, chopping, beating and stirring of food products).

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
  - sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.

### Wall-Mounting



Fig. 2

The set includes practical wall-mount with fixing elements, which provides for storage of stick mixer in a manner facilitating easy access saving of space at the same time.

1. Install the wall-mount in an easily accessible place, using the enclosed fixing elements and then insert the mixing stick in the wall-mount.
2. If you do not use the wall-mount, place the mixing stick on a flat surface.

**NOTE: If left standing upright, the fixing stick features low stability.**

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Do not use the appliance with an external timer or remote control.

EN

## 5.2 Operation



### WARNING!

**Danger of injury inflicted by sharp sickle blades of the appliance!**

Exercise extreme caution when handling the stick mixer.

Hold the sickle blades by plastic upper part only, and use gloves resistant to cutting.

### Before the First Use

1. Make sure that all components of the appliance and accessories are available and in sound condition.
2. Prior to first use, thoroughly clean the appliance and equipment according to instructions in section 6 “Cleaning”.
3. Prior to assembly, thoroughly dry all components.
4. Prepare food products for processing.
5. Connect the appliance to a single grounded socket.

### Using the Appliance as a Mixer

The stick mixer may be used especially for preparation of dips, sauces, soups, mayonnaise, nutrients for infants, as well as for mixing foods and milk shakes.



Fig. 3

1. Mount the stainless still mixing stick on the motor block until you hear a click.
2. Put and keep the mixing stick in a container with a product for mixing.

**NOTE: The stick mixer may also be used in a container with a scale or in another container.**



Fig. 4

3. Then select suitable speed level in the range of 1–5; to this end use the speed control located in the top part of the motor block.
4. In order to start the stick mixer, press switch I (for lower revolutions) or switch II (for higher revolutions).

### ATTENTION!

**Never operate the appliance outside a container.**

5. After use, switch the appliance off and disconnect it from power supply (pull the plug out).
6. After use, screw the mixing stick out of the motor block.

### **ATTENTION!**

**Never use the stick mixer for more than 1 minute of uninterrupted work.**

## Using the Appliance as a Chopper

The stick mixer is equipped with accessories perfect for chopping meat, cheese, onion, herbs, garlic, carrot, walnuts, almonds, plums, etc.

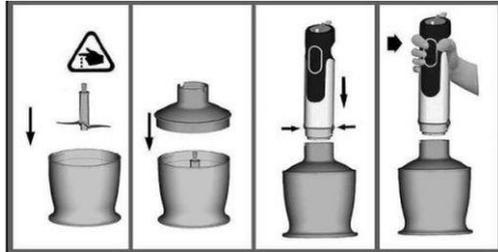


Fig. 5

### **ATTENTION!**

**Never attempt to chop very hard food products, e.g. ice cubes, nutmeg, coffee grains or cereals.**

### **Prior to Chopping**

1. Carefully remove plastic cover of the sickle blade.
2. Mount the suitable sickle blade onto a central pin of the suitable special container.
5. Press down the sickle knife, until it locks in the special container.
6. Always place the special container on the anti-slip pad.
7. Put food products in the special container.
8. Place the lid on the special container.
9. Screw the motor block onto the lid of the special container, until it locks.
10. To operate the appliance as a chopper, use the switch **II**.
11. When operating, hold the motor block with one hand and the special container with the other one.

12. After use, switch the appliance off and disconnect it from mains socket (pull the plug out).
13. Then screw the motor block off of the lid of the special container.
14. To finish with, remove the lid of the special container and then, carefully, the sickle knife.
15. Remove the ready food out of the special container.

**Table for Processing of Products in Special Containers**

Food type	Filling amount (max.)	Processing time (s)	Filling amount (max.)	Processing time (s)	Preparation
	Special container, 500 ml		Special container, 1.250 ml		
Meat	250 g	8	500 g	10	1 x 2 cm
Herbs	50 g	8	100 g	8	
Nuts	100 g	8	300 g	10	
Cheese	100 g	5	200 g	8	1 x 2 cm
Bread	80 g	5	160 g	6	2 cm
Onion	150 g	8	300 g	8	2 cm
Cakes	150 g	6	300 g	6	2 cm
Soft fruit	200 g	6	400 g	8	1 x 2 cm
Flour	/	/	400 g	10	/
Water	/	/	240 g		/
Yeast	/	/	8 g		/
Sugar	/	/	8 g		/
Salt	/	/	8 g		/

### Using the Appliance with Whisk

The whisk should be used for beating cream and egg whites, mixing dough and instant desserts.

1. Insert the whisk into the holder and then screw the holder onto the motor block until it locks in place.
2. Put the whisk in a suitable container for mixing and select suitable speed level (1–5).
3. To operate the whisk, start the switch **I** or **II**.

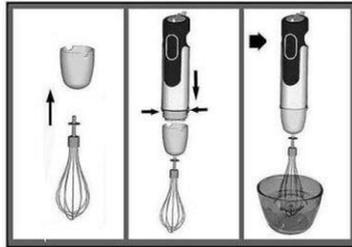


Fig. 6

#### **ATTENTION!**

**Never use the whisk for more than 2 minutes of uninterrupted work.**

4. After use, switch the appliance off and disconnect it from mains socket (pull the plug out).
5. After use, screw the holder out of the motor block.
6. To end with, pull the whisk out of the holder.

## 6 Cleaning

### 6.1 Safety Instructions for cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning



#### **WARNING!**

**The sickle blades of the appliance are very sharp! Injury hazard!**

Keep caution during operation of sickle blades!

Always use gloves resistant to cutting during cleaning of the sickle blade.

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Clean the motor block and power cable with soft, damp cloth only.

#### **ATTENTION!**

**Never immerse the motor block in water or other liquids.**

3. Clean all detachable parts of the appliance with warm water and mild cleaning agent.
4. Rinse the cleaned elements in pure water.
5. At the end, leave these elements to dry in open air.

**NOTE: All detachable parts of the appliance (except for the motor block) may be washed in a dishwasher.**


6. Do not use excessive amount of washing nor descaling agent in a dishwasher.

## Disposal

7. If foods with intense colours are prepared with the use of the appliance, the plastic components may fade out and stain. Prior to placing these elements in a dishwasher, wipe them with vegetable oil.

## 7 Disposal

### Electrical appliance

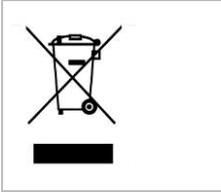

Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.