Bartscher



105981





Instruction manual Wok pan



Mode d'emploi Sauteuse wok



Manuale di utilizzo
Padella wok



Instrucciones de uso Sartén wok



Manual de instruções Fritadeira wok



Gebruiksaanwijzing Wokpan



Bedieningshandleiding Wokpande



Инструкция по эксплуатации Вок-сковорода



Kullanma kılavuzu Wok tava



Instrukcja obsługi Wok patelnia



Návod k obsłużę Pánev wok



Upute za upotrebu Wok tava



Használati útmutató Wokserpenyő



Οδηγίες χρήσης που **Σκεύος Wok**







Technical information:

Wok pan with cover

Stainless steel

stay-cool handles: hand grip and handle opposite

Capacity: 6 litres

• Weight: 2.0 kg (2.85 kg with cover)

Size: Ø 360 mm, H 110 mm (with cover 215 mm)

Code No: 105981

Tips for use and cleaning:

 Before first use, wash the wok pan thoroughly in hot water with washing-up liquid and a soft cloth or sponge. Dry thoroughly after washing. This will remove any remains of the production and packing processes.

- Before using the wok ensure it is clean and dry, or the wok may be discolored at higher temperatures.
- Never leave an empty wok in the hot concave cooking zone.
- When cooking, always use the lowest temperature possible to reduce discoloration of the wok pan's surface.
- Wash the wok pan after each use with a brush or sponge and washing-up liquid.



CAUTION!

The wok pan is unsuitable for dishwashers!

- For more stubborn dirt, we recommend soaking the pan in water. After soaking, wash as described above.
- To remove discolorations from the wok's surface, vinegar or lemon juice may be used.
 After washing wet a soft cloth or sponge with a small amount of vinegar / lemon juice and wipe the wok's interior and exterior. The wok will shine like new.
- Use only soft cloth, <u>never</u> use harsh chemicals or tools which could damage the wok's surface.

phone: +49 (0) 5258 971-0

fax:

+49 (0) 5258 971-120

After washing, use a soft, dry cloth to dry and polish the wok's surface.

Bartscher GmbH Franz-Kleine-Str. 28 D-33154 Salzkotten Germany