

5,4L



100062

ENGLISH

Table of contents

1. Safety 18
1.1 Safety instructions 18
1.2 Key to symbols 20
1.3 Hazard sources 21
1.4 Proper use 23

2. General information 24
2.1 Liability and Warrantees 24
2.2 Copyright protection 24
2.3 Declaration of conformity 24

3. Transport, packaging and storage 25
3.1 Delivery check 25
3.2 Packaging 25
3.3 Storage 25

4. Technical data 26
4.1 Overview of parts 26
4.2 Technical specification 27

5. Installation and operation 27
5.1 Installation 27
5.2 Operation 28

6. Cleaning 31

7. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device can be used by children **over 8 years**, as well as by people with disabilities and those with limited experience and knowledge, as long as they are under supervision or have been instructed on the safe use of the device and understand the dangers resulting from it. **Children** may not play with the device. Cleaning and **maintenance cannot** be performed by **children** left unattended.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Always transfer or move the device only when it has completely cooled down.
- Only use the device indoors.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Hazard sources



DANGER!

Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Do not use the machine in case of incorrect operation, damages or dropping on the floor.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the device, power cable or the plug in water or any other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



DANGER!

Suffocation hazard!

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



HOT SURFACE!

Burn hazard!

To avoid the hazard results please follow the safety instructions below.

- Never move the device containing hot liquids and food products, as this may lead to spilling and cause serious burns.
- During the operation the hot steam escapes from the device. Remove the lid only with the use of protective gloves or an appropriate cloth.
- Never overfill inner and outer pots of the device: hot boiling liquid poses a risk of burns.
- During the work the external surface of the device becomes very hot. To avoid burns do not touch these surfaces with bare hands. The device should be controlled using only a temperature dial and a lid handle.



WARNING!

Fire or explosion hazard!

To avoid the hazard results please follow the safety instructions below.

- **Never** use the device near the flammable materials (e.g. petrol, spirits, alcohol, etc.). High temperature may result in their evaporation leading to the contact with the sources of combustion. This may result in deflagration leading to the personal injury and property damage.
- In case of fire, before starting the relevant firefighting actions, disconnect the device from the power supply (pull the plug!). **Caution:** Do not sprinkle the device with water when while is still energized: **Electric shock hazard!**



CAUTION!

To avoid possible damage of the device, please observe the following instructions.

- **Never** turn the soup kettle on with empty/dry outer pot.
- Never wash the device or its parts in the dishwasher.
- Do not clean the device surfaces with sharp objects or abrasive cleaning agents.

1.4 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is not designed for continuous operation in the industrial applications.

The device is intended for home use or in similar places such as:

- in stores, offices and other similar places of work;
- in agricultural farms;
- by guests at hotels, motels and other similar accommodations;
- in Bed & Breakfasts.

The soup kettle is intended only for maintaining the temperature of soups, goulash, sausages.

Do not use the soup kettle for:

- cooking soups or other dishes;
- heating flammable, noxious and volatile liquids or other such materials.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Overview of parts



- 1** Hinged stainless steel lid
- 2** Lid handle
- 3** Ladle cut-out
- 4** Carrying ring
- 5** Outer pot
- 6** Control light (green)
- 7** Temperature dial
- 8** Setting marker
- 9** Feet (3)

4.2 Technical specification

Name	Soup Kettle 5.4L
Code-No.:	100062
Material:	<ul style="list-style-type: none">▪ outer pot: black, enameled sheet steel;▪ removable stainless steel insert pot▪ rotary and hinged stainless steel lid with ladle cut-out and heat-insulated handle
Temperature range:	35 °C to 95 °C
Volume:	5.4 litres
Power:	0.3 kW / 230 V 50 Hz
Dimensions:	Ø 265 mm, height 395 mm
Weight:	2.95 kg
Accessories:	8 magnetic adhesive soup labels included

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- Ensure a safe distance of the device from walls, shelves, cupboards etc. to avoid damages caused by high temperature and steam, and to ensure smooth working conditions. Ensure free circulation of air around the device.
- **Never** place the device at the edge of a table to avoid accidents.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.


5.2 Operation

Device features

The **soup kettle** consists of a heated outer pot with thermostatic control, a removable stainless steel insert pot and a carrying ring which is set on top of the outer pot. The device is provided with a rotary and hinged stainless steel lid with a ladle cut-out and a heat-insulated handle.

The soup kettle operates like a water bath. The temperature of food is maintained by a coat of water heated electrically.

The lid locks in **two** different positions:

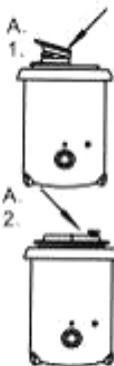

→ **opened sideways**
fig. A1.

for filling-in and serving of foods.

→ **closed**
fig. A2.

for economic heating of foods.

Preparation of the device

- Before using the device, remove the lid and carrying ring, remove the stainless steel insert pot and clean all parts thoroughly following the instructions in section 6 „Cleaning“.
- Pour the water into the outer pot **only up to „MAX“** mark. **Never pour more** water to the other pot, as otherwise it may spill out when the insert pot is placed inside the outer pot. Make sure that the water level is not below the „MIN“ mark.



CAUTION!


Do not turn on or use the soup kettle when the outer pot is empty / dry.



NOTE!

To reduce heating time, you may use warm water. This saves time and energy!

Filling in food products and maintaining their temperature

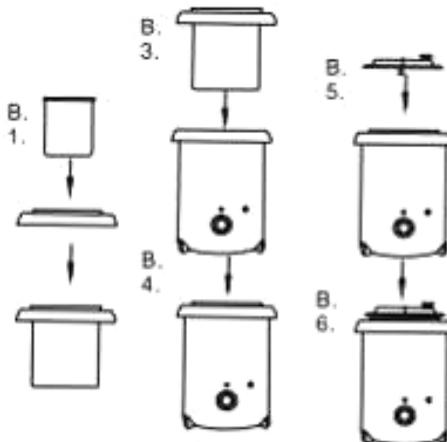

- Fill the stainless steel insert pot with the desired food warm food products and place it through the center of the carrying ring (**fig. B1**).
- Using the carrying ring place the stainless steel insert pot inside the outer pot (**fig. B3-B4**).
- Place the lid on the soup kettle (**fig. B5-B6**).

- Before connecting the device to the power supply, set the temperature dial to „0“ position.
- Connect the device to a single grounded socket.



- Set the appropriate temperature for the relevant food product using the temperature dial.
 - **To increase** the temperature of the food product set the values: **8 - 12**.
 - **To decrease** the temperature of the food product set the values: **1 - 8**.

- Smooth temperature dial (1-12) ensures the contents of the kettle are heated at regular intervals.
- The green control light is on during the heating phase. When the desired temperature is reached, the control light goes off and comes on again when the temperature inside the stainless steel insert pot drops again.

Note: Heating time depends on the amount and temperature of food products and temperature of water in the outer pot.

Serving food products



WARNING! Risk of burns!

Open the lid carefully, because during heating the steam gathers under the lid during heating. The steam and spilled water may cause burns!

- Open the lid and using the ladle serve warm food directly from the soup kettle.
- After removing the food, close the lid again to avoid heat loss.
- When finished using the device, turn the temperature dial to the „0“ position and unplug the device from the socket (pull the plug!).
- ❖ The device is equipped with a function preventing it from **overheating/operating when dry**. If the device is accidentally turned on without water or with too little water, the safety mechanism will be activated and the device will be automatically shut off. In this case, turn the device off (set the temperature dial at „0“ position), remove the plug from the socket and wait for it to cool down. After cooling, fresh water may be poured in and the device can be used normally.

6. Cleaning



CAUTION!

Before cleaning, make sure the device is disconnected from the power supply (pull the plug!) and wait for the device to cool down.

The device is not suited for direct washing via water jets.

Therefore, do not use any kind of pressure water jet for cleaning the device!

Make sure no water gets into the device.

- Before cleaning, transporting or storing the device, it must cool down first, otherwise there is a **risk of burns!**
- Before cleaning, empty the stainless steel insert pot and outer pot. Remove the lid and remove the stainless steel insert pot with the carrying ring. Empty the outer pot.
- **Note!** During washing and operation of the device **never** immerse its electric parts in water or other liquids. **Never** put the device under running water.
- **After each use**, clean the device **thoroughly**, because the food products as well as spices and salt contained in them are aggressive and may damage the device.
- Wash the lid, stainless steel insert pot and carrying ring with a soft cloth and mild cleaning agent.
- Next, dry the cleaned elements thoroughly.
- Wipe the outer pot on the inside and the outside with a soft, moist cloth.
- Always use a soft cloth for cleaning and **never** use abrasive cleaning agents that may damage the surface of the device.
- After cleaning, dry and polish the surfaces with a dry cloth.

Storage

- If the device is not used for any lengthy period, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun and children. Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120